

Configuration of the «LiberT» remote control with your Visionair balance

CONFIGURE A TRUCK UNIT NUMBER IN THE SCALE AND IN THE REMOTE CONTROL

STEP 1

Enter the truck unit number in the scale

- Hold the button **M** for 3 seconds to enter the system menu;
- Select « Truck unit No. », press **M**;
- Enter your truck number and hold **M** to save.

STEP 2

Enter your truck unit number in the « LiberT » remote control

* The remote control must be closed before starting

- Hold the button **U** to enter the menu;
- Press **M** to select Unit number;
- Select a unit from 01 to 50, press **M**;
- Press the left arrow **V** to modify;
- Enter your unit number with the arrows (**V** **A**), press **M** to save (only the last 4 digits of the number you entered in your balance are necessary).

It will appear “Truck Search”. Close your remote control and press **U** once to open your « LiberT ». It will be configured with your truck.

* You can configure up to 50 units with your « LiberT »



Configuration of the «LiberT» remote control with your Visionair balance

CONFIGURE A TRUCK UNIT NUMBER IN THE SCALE AND IN THE REMOTE CONTROL

STEP 1

Enter the truck unit number in the scale

- Hold the button **M** for 3 seconds to enter the system menu;
- Select « Truck unit No. », press **M**;
- Enter your truck number and hold **M** to save.

STEP 2

Enter your truck unit number in the « LiberT » remote control

* The remote control must be closed before starting

- Hold the button **U** to enter the menu;
- Press **M** to select Unit number;
- Select a unit from 01 to 50, press **M**;
- Press the left arrow **V** to modify;
- Enter your unit number with the arrows (**V** **A**), press **M** to save (only the last 4 digits of the number you entered in your balance are necessary).

It will appear “Truck Search”. Close your remote control and press **U** once to open your « LiberT ». It will be configured with your truck.

* You can configure up to 50 units with your « LiberT »



PRINTER OPTION

Programming the printer

PROGRAM THE COMPANY NAME

- Hold the arrow **V** at the bottom left;
- Select « Company names » with the arrows;
- Press **M** to enter;
- Hold **M** to change the name;
- Using the arrows, select the desired number or letter;
- Press **M** to confirm the desired number or letter;
- Once the name of the company has been entered, hold the button **M** to save;
- To select your company name, press **M**.



PRINTER OPTION

Programming the printer

PROGRAM THE COMPANY NAME

- Hold the arrow **V** at the bottom left;
- Select « Company names » with the arrows;
- Press **M** to enter;
- Hold **M** to change the name;
- Using the arrows, select the desired number or letter;
- Press **M** to confirm the desired number or letter;
- Once the name of the company has been entered, hold the button **M** to save;
- To select your company name, press **M**.



PROGRAM THE TIME, DATE, NUMBER OF IMPRESSIONS AND THE CHOICE OF PRINTING (AXIAL OR NET)

- Hold **M** to enter the system menu;
- Select « Printer » and press **M**;
- QTY. Copies : Choice of 1 to 3 copies by pressing **M**;
- Time-date : Press **M** to enter;
- Using the arrows, select the time and date then press **M** to confirm;
- Press **M** to exit the menu;
- Printing : Choose Axial or Net by pressing **M**.

COUPON INFORMATION

	AXIAL	NET
10-12 WHEELS	Weight in front (In front of the truck) Rear weight (Rear truck) Total weight	Weight before (Total weight : Empty truck) Weight after (Total weight : Full truck) Net weight (Full truck minus empty truck)
SEMI-TRAILER	Truck weight Semi-trailer weight Total weight	Weight before (Total weight : Truck + empty semi-trailer) Weight after (Total weight : Full truck + semi-trailer) Net weight (Full weight minus empty weight)
10-12 WHEELS	Truck weight Weight Train A Weight Train B Total weight	Weight before (Total weight : Truck + Train A + Train B empty) Weight after (Total weight : Truck + Train A + Train B full) Net weight (Full truck minus empty weight)

Printing

AXIAL

- Press the arrow **▲** at the bottom right;
- Select YES **▼** or NO **▲**.

NET

- For the Net selection, you must record the weight of the empty truck before each loading by pressing the arrow **▲** at the bottom right;
- When loading is complete, press the arrow **▲** at the bottom right;
- Select YES **▼** or NO **▲**.



Distributions NJCO inc.
 1036 B, Route de Fossambault St-Augustin-de-Desmaures
 QC G3A 1W8 418 624-0884
www.balancevisionair.com | info@balancevisionair.com

PROGRAM THE TIME, DATE, NUMBER OF IMPRESSIONS AND THE CHOICE OF PRINTING (AXIAL OR NET)

- Hold **M** to enter the system menu;
- Select « Printer » and press **M**;
- QTY. Copies : Choice of 1 to 3 copies by pressing **M**;
- Time-date : Press **M** to enter;
- Using the arrows, select the time and date then press **M** to confirm;
- Press **M** to exit the menu;
- Printing : Choose Axial or Net by pressing **M**.

COUPON INFORMATION

	AXIAL	NET
10-12 WHEELS	Weight in front (In front of the truck) Rear weight (Rear truck) Total weight	Weight before (Total weight : Empty truck) Weight after (Total weight : Full truck) Net weight (Full truck minus empty truck)
SEMI-TRAILER	Truck weight Semi-trailer weight Total weight	Weight before (Total weight : Truck + empty semi-trailer) Weight after (Total weight : Full truck + semi-trailer) Net weight (Full weight minus empty weight)
10-12 WHEELS	Truck weight Weight Train A Weight Train B Total weight	Weight before (Total weight : Truck + Train A + Train B empty) Weight after (Total weight : Truck + Train A + Train B full) Net weight (Full truck minus empty weight)

Printing

AXIAL

- Press the arrow **▲** at the bottom right;
- Select YES **▼** or NO **▲**.

NET

- For the Net selection, you must record the weight of the empty truck before each loading by pressing the arrow **▲** at the bottom right;
- When loading is complete, press the arrow **▲** at the bottom right;
- Select YES **▼** or NO **▲**.



Distributions NJCO inc.
 1036 B, Route de Fossambault St-Augustin-de-Desmaures
 QC G3A 1W8 418 624-0884
www.balancevisionair.com | info@balancevisionair.com